

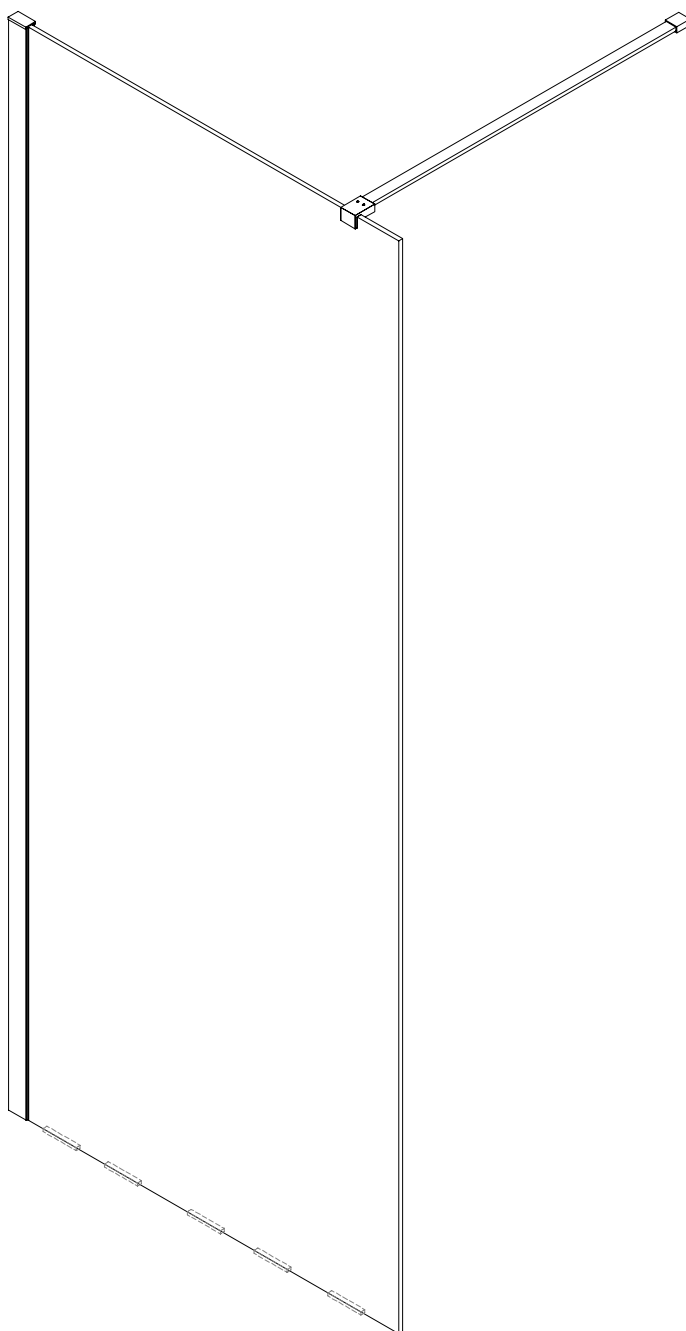
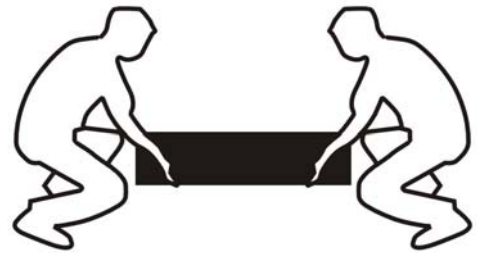
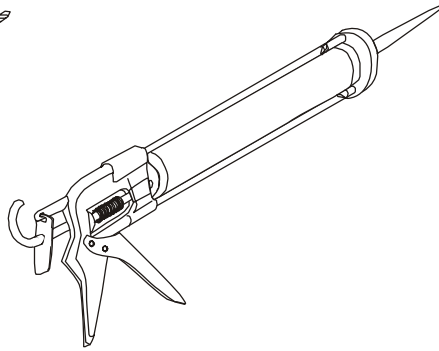
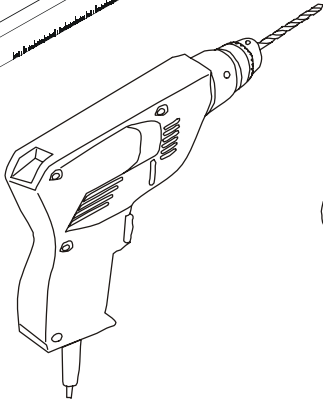
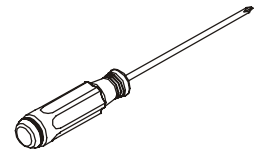


Side glass

Installation instructions















(For 2120-60/70/80/90/100/110/120/130/140)


























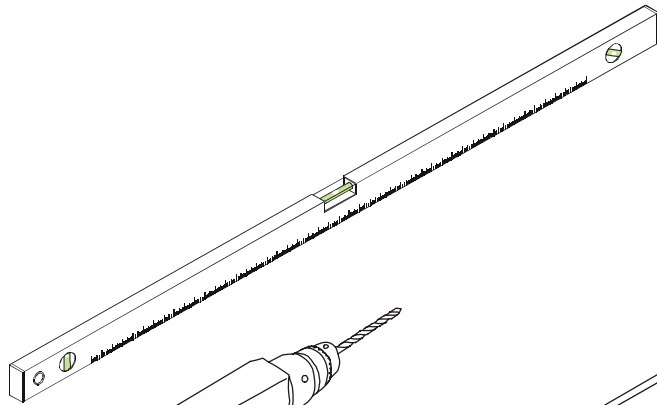


1



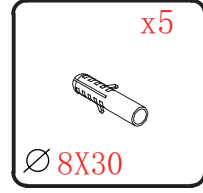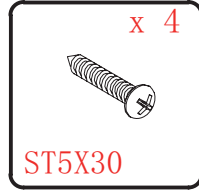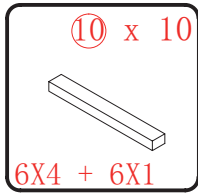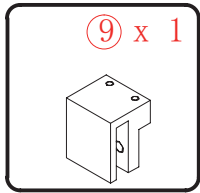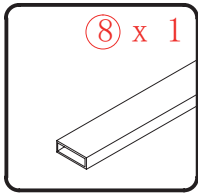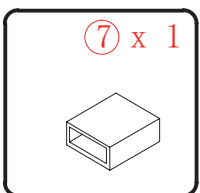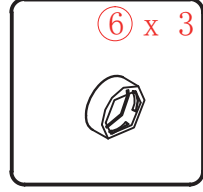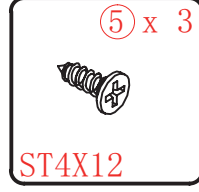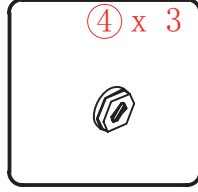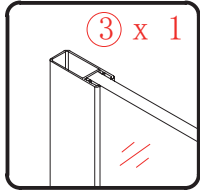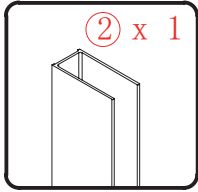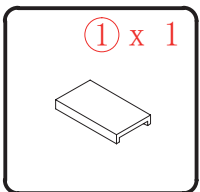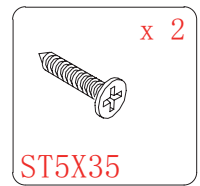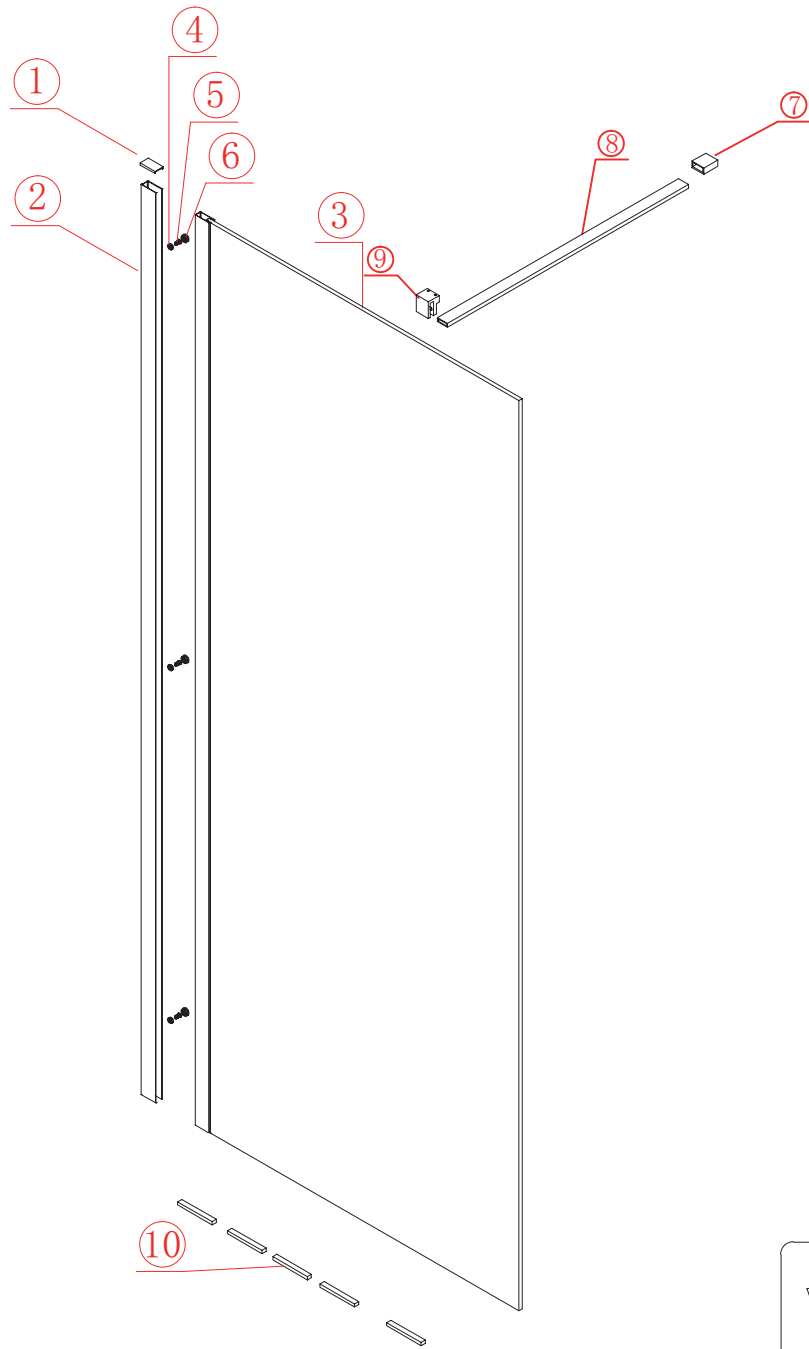

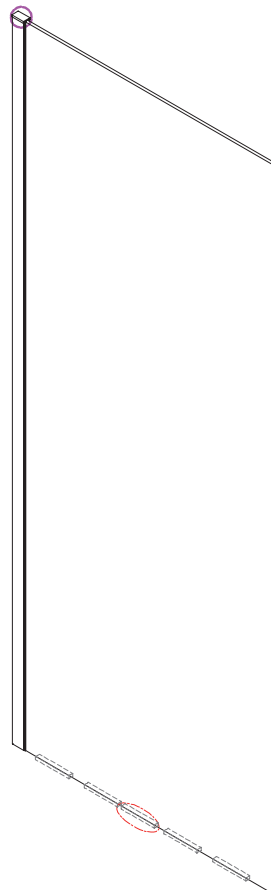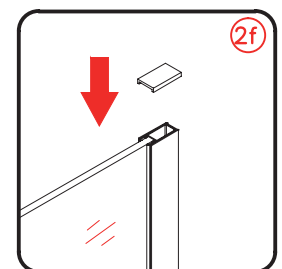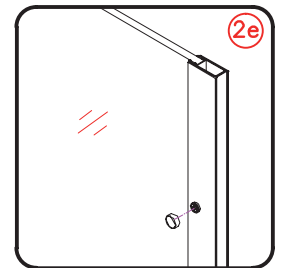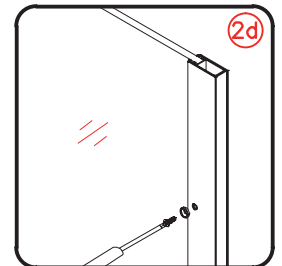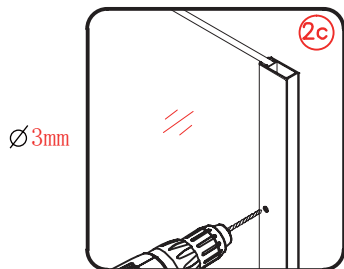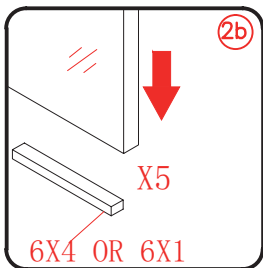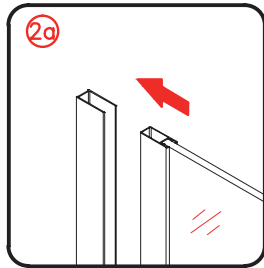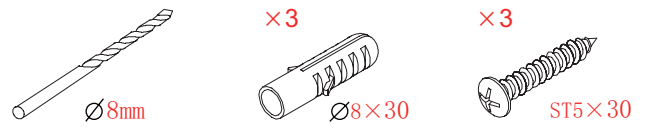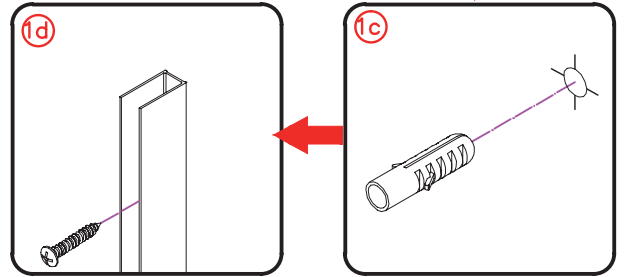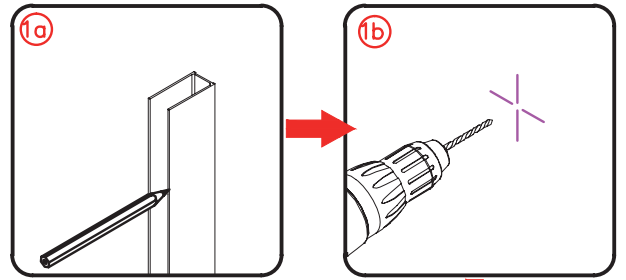

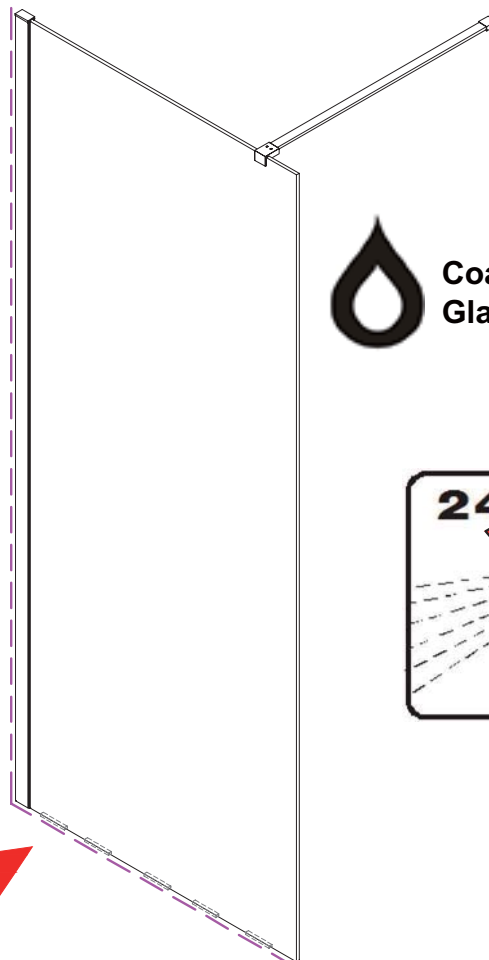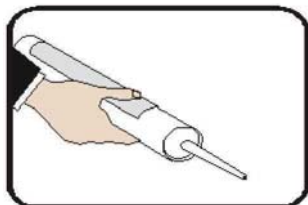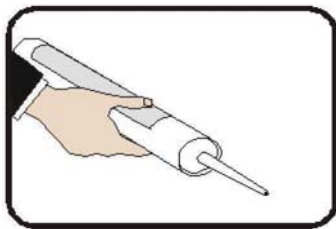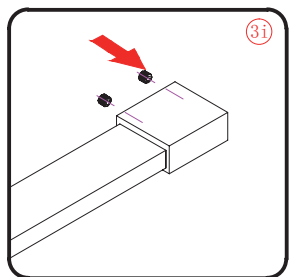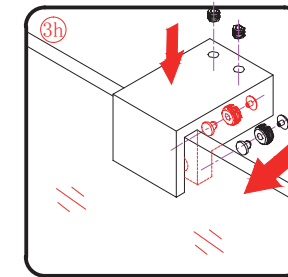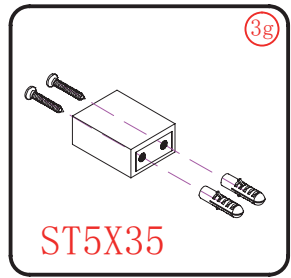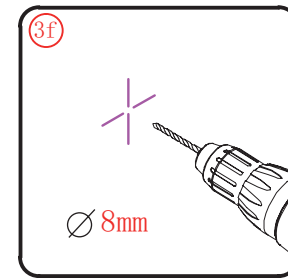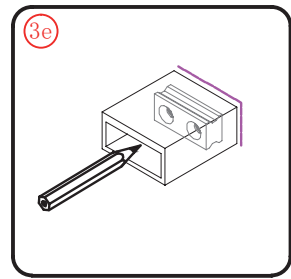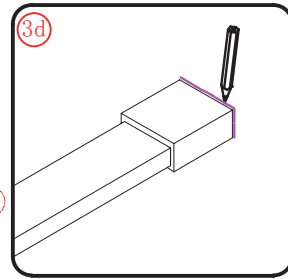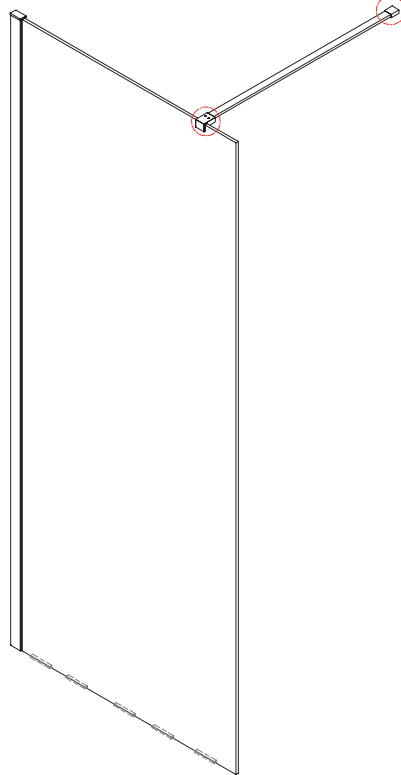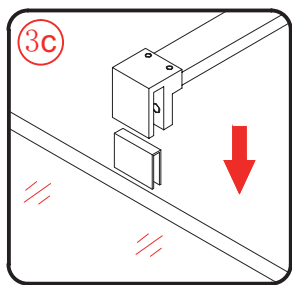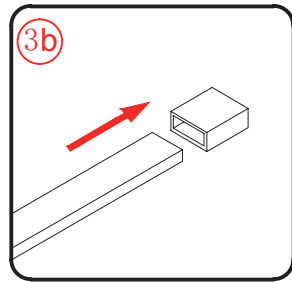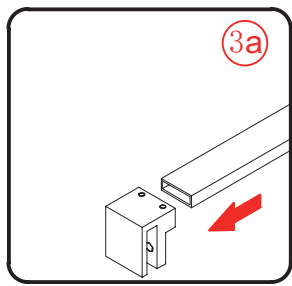

Coated Glass

